

## Instructions and maintenance

# **BARBARA 27 mod. 2010**

BATTISTELLA B.G. S.r.l.

This manual is property of BATTISTELLA B.G. S.r.l. We reserve the right to make changes without notice. All rights reserved.



### **INSTRUCTIONS AND MAINTENANCE**

### BARBARA 27 mod. 2010

#### *Read these directions carefully before operating. Don't use the machine differently from the following description.*

#### **1. SPECIFICATIONS**

MODEL: POWER SUPPLY: TOTAL INSTALLED POWER: IRON POWER: BOILER POWER: BOILER CAPACITY: IRONING ENDURANCE: OPERATING STEAM PRESSURE: MAXIMUM PRESSURE: WEIGHT: OVERALL DIMENSIONS: MADE IN ITALY

#### BARBARA 27 mod. 2010

230 V - 50 Hz 2250 W 800 W 1450 W 3,4 L. (INOX) about 3-4 hours 2,8 BAR 5 BAR 15 kg. 25x29x89 h. cm

#### 2. IMPORTANT

Before installing BARBARA 27, it is necessary to set up the following facilities:

 electrical plug protected and suitable to BARBARA 27 power (it is better to use an earth protector thermo magnetic switch 16 A ld 30mA).

To move the Barbara 27, use the proper handle. Never pull the electric cable (fig. 1).

This steam generator is not suitable for people (children included) with physical or mental handicaps or inexperienced persons, unless they are instructed by a person who takes the responsibility for their safety. Children must not play with the steam generator.

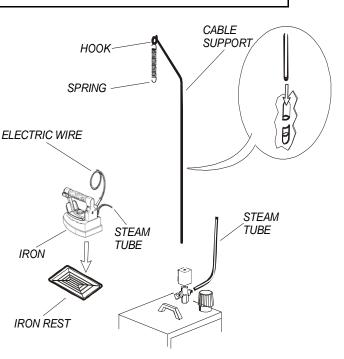


Fig. 1

#### **3. OPENING OF PACKAGE**

- 1. Open the box containing BARBARA 27 from the side marked with ALTO  $\uparrow$  , take out the instruction manual and read it carefully.
- 2. Remove BARBARA 27 from the box and insert the cable support deep into the special hole (fig. 1) placed on the back side of the generator.
- 3. Fix the spring to the support hook, avoiding entwining (fig. 1).
- 4. Place the iron on the rubber iron rest supplied with the machine (fig. 1).

#### **4. CONNECTION AND STARTING**


With BARBARA 27 switched off and disconnected plug:

1. Unscrew the safety valve plug of BARBARA 27 (fig. 1) and fill the boiler with water to the desired level, paying attention not to exceed the MAX level marked on the level glass (fig. 2).

Take the plug by the plastic part and screw it again: do not tighten too much or its gasket might get spoilt (see section 7).

#### N.B.: make sure the exhaust tap of the boiler is closed (fig. 7).

- 2. Insert the plug into a 230 V 16 A socket.
- 3. In case the boiler is too much filled, the iron might leak water. If this is the case, switch off the machine, unscrew the plug a bit, let all the steam come out of the boiler and wait until the water and the boiler are cold. At this point turn the exhaust tap so that the excess water flows out (section 8).
- 4. Switch on the boiler (fig. 2 B). After 5 minutes switch on the iron (fig. 2 C) and adjust the thermostat on "cotton" (fig. 4).
- 5. Wait for the boiler lamp to switch off (fig. 2 A). Seize the iron by cork handle and press the micro-switch of the iron (fig. 5) 4 or 5 times, so that steam comes out. It is important to make sure it is a saturated steam (by pressing the micro-switch with the iron pointed towards the floor). It is possible to adjust steam flux by turning the hand-wheel placed on the solenoid valve (fig. 3). Now everything is ready for ironing. During ironing operation, the boiler lamp switches on and off signalling that the machine is working properly (fig. 2 A).

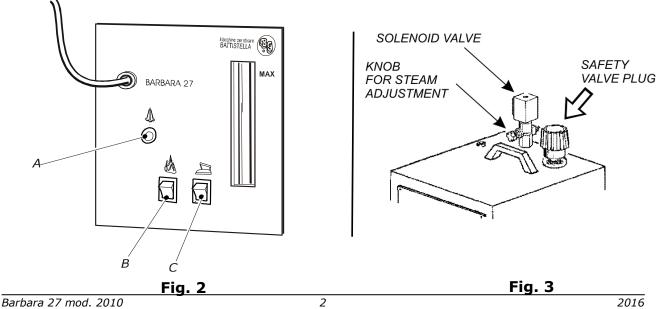

#### **5. GENERAL WARNINGS**

- 1. Connect BARBARA 27 to a suitable and protected socket (avoid connecting the device to multiple sockets or extensions which are not suitable to its power).
- 2. Keep children away from BARBARA 27, both when it is on and off.
- 3. Place the equipment on a steady surface indoor with a temperature between +10°C and +40°C. Do not leave BARBARA 27 outside exposed to the action of the atmospheric agents.
- 4. The operator must never leave the machine unattended when it is switched on.
- 5. <u>Use only drinkable water coming from the water supply for domestic use</u>.
- 6. Never add any sort of additives to water.
- 7. Never empty the boiler while it is working (see section 8).
- 8. Never unscrew the safety valve plug while machine is being used.
- 9. Never replace the safety value plug (fig. 3) with other types of plug. <u>N.B.</u> <u>the safety value plug is set at 4,5 bar and it has the function of a safety</u> <u>value</u>.
- 10.Never leave the iron on the board or on garments when it is on.
- 11.Never place the iron directly on the metal part of the iron rest (always use the proper rubber rest).
- 12.Do not iron garments directly on persons or things.
- 13. When in use, do not bring the machine near inflammable or thermo-labile parts.

#### **6. IRONING OPERATION**

- 1. Run the iron on garments, pressing the iron micro switch (fig. 5) for steam.
- 2. For delicate, blue and black garments, we advise you to use the anti-sheen shoe.
- 3. During ironing operation, always put the iron on its rubber rest (fig. 1).
- 4. For dry ironing it is possible to adjust the thermostat (fig. 4) on different positions according to the type of fabric (look at garment label). For steam ironing, set the thermostat on "cotton" or "linen".
- 5. If you work on a non-vacuum board, some circular water spots might form because of condensed steam. To get round this problem, reduce the steam flux through the knob for steam adjustment (fig. 3). It is recommended to combine the machine with a vacuum and heated ironing board.

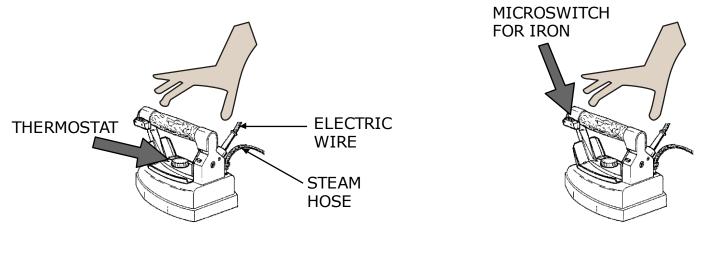


Fig. 4

#### 7. WATER FILLING

During the ironing, if steam flux decreases considerably and then ends definitely, it means that there is no more water in the boiler. BARBARA 27 has to be switched off by <u>disconnecting the plug</u>; rotate the valve plug (fig. 3) 360° and wait for steam to go out completely. Unscrew the valve plug with care and wait 5/10 minutes.

Fill the boiler with water (fig. 6), paying attention not to exceed MAX level (section 4 – point 1). The use of a funnel is suggested. Screw the valve plug again (fig. 1), connect the plug and wait for the boiler lamp to switch off (fig. 2 A). Now the iron is ready to iron again.

While refilling the boiler, do not spill water onto the machine. In the event this should happen, dry immediately in order to avoid electrical risks.

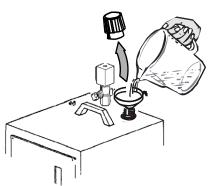


Fig. 6

#### 8. BOILER DISCHARGE

Empty the boiler periodically. <u>Carry out this</u> operation when BARBARA 27 is turned off, cold and the plug is disconnected. Wait at least 1 hour after the switching off. During this procedure, wear proper gloves in order to avoid accidental burns.

Unscrew the valve plug and turn the exhaust tap (fig. 7), wait for all the water to come out and then turn it off again. The tap might get clogged: in this case, use a wire with a diameter of 3-4 mm or similar and introduce it into the tube in order to unclog it.

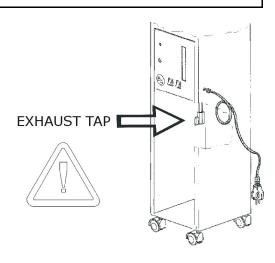


Fig. 7

#### 9. GOOD FUNCTIONING

BARBARA 27 was designed and manufactured for the ironing of domestic garments. It can be used maximum 20 hrs. per week (subdivided in many times) or 80 hrs. per month.

#### **10. INTERVENTIONS AND SMALL REPAIRS**

- 1. It is recommended to empty the boiler every 2-3 times you use it.
- 2. It is recommended to replace the gasket of the safety valve plug (use only original gaskets) every 1200 hrs. of lighting or maximum 2 years, or earlier if it is damaged. <u>Carry out this operation when the machine is switched off and cold</u>.
- 3. If the electric wire is damaged, replace it immediately. The wire is supplied by the manufacturer or authorized service centres.

#### **11. COMPULSORY PERIODICAL MAINTENANCE**

#### (To be carried out exclusively by assistance centres or by the manufacturer)

It is recommended to replace:

- 1. the internal safety valve every 2100 hrs. of ironing or maximum 3 years;
- 2. the internal thermostat every 2100 hrs. of ironing or maximum 3 years;
- 3. the steam tube and the electric iron wire once they seem damaged (fig. 4);
- 4. the safety valve plug every 2500 hrs. or maximum every 3 years (fig. 3).

It is recommended also to clean the boiler from limestone every 2500 hrs. of ironing or maximum 3 years.

#### **12. ELECTRICAL RISKS**

The following situations are considered dangerous for the operator:

- 1. earth protector switch is activated when turning on the machine;
- 2. using BARBARA 27 during thunderstorms;
- 3. using BARBARA 27 without proper protection for feet (without shoes) or with wet feet;
- 4. damaged electrical wires;
- 5. when the electric wires touch hot parts of the machine;
- 6. iron overheating or loss of water from iron (fig. 4);
- 7. washing or cleaning the iron using water (fig. 4);
- 8. loss of water from the machine;
- 9. filling the boiler when BARBARA 27 is switched on.

#### **13. MECHANICAL RISKS**

The following situations are considered dangerous for the operator:

- 1. using BARBARA 27 for different purposes other than ironing;
- 2. replacing the gasket of the safety valve plug with non-original gaskets.


#### **14. THERMIC RISKS**

The machine can become extremely hot: use it very carefully and disconnect the plug when not in use.

Wait for the machine to cool down before cleaning it.

The following situations are considered dangerous for the operator:

- 1. touching the iron base when it is hot;
- 2. touching the solenoid valve while there is pressure inside the boiler;
- 3. emptying the boiler or touching the water discharge tap while there is pressure inside the boiler;
- 4. touching the safety valve plug when there is pressure inside the boiler;
- 5. pointing the steam iron towards persons or animals.

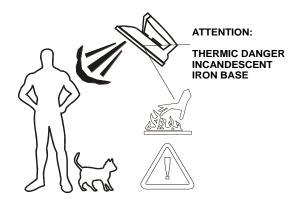

- Do not iron garments directly on persons.
- Do not leave hot iron on garments.
- After use, always put iron on its rubber rest.

#### **15. PACKING, STORAGE AND TRANSPORT**

BARBARA 27 is packed in a cardboard box which cannot be turned upside down. As this is not a stiff package it is not shock-resistant. We therefore suggest to handle the box with utmost care and not to use it as a stool or support.

For authorized distributors and resellers: do not store the boxes one on top of another and keep them dry, paying attention to store them with  $\hat{U}$  upwards (Handle with care).

#### **16. WARRANTY**

Warranty does not apply to damage resulting from:

- Tampering with the machine or repairs carried out by non-authorized personnel;
- Total or partial inobservance of the instructions contained in this manual;
- Improper maintenance or wrong assembly/connection;
- Use of non original spare parts;
- Use of the machine for purposes other than those written in this manual.

#### **17. DISPOSAL**



According to the directive 2012/19/UE on waste of electrical and electronic equipment, do not treat this product as household waste.

This appliance is marked according to the directive 2011/65/UE on restriction of use of specific dangerous substances in electrical and electronic equipment.

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and

electronic equipment.

Ensuring this product is disposed of correctly will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

The abusive disposal of the product by the user may lead to administrative sanctions.

# Every product manufactured by BATTISTELLA B.G. S.r.l. is subject to the following limitations:

- Battistella B.G. S.r.I. guarantees that this machine, correctly installed and used, works accordingly to this manual of instructions. Each implicit <u>guarantee</u> is limited by law as from purchase date.
- Declination of responsibility for consequential damages: Battistella B.G. S.r.I. will never take the responsibility for any damage (included, without any limitation, consequential damages due to loss or no profit, cutback or any other economical loss) deriving from the use of a BATTISTELLA machine, even in case the Company had been previously informed of such kind of possibility.

Should you need **further information** about this manual, please contact **Battistella B.G. S.r.I.** or the person who sold you the machine.